


HHO Tanker Installation instructions

- 1.# Please ask customer where they would like tanker located.
- 2.# Tanker should be powered on when ignition is turned on.
- 3.# Manual LED switch should be installed to override ignition switch, so driver can manually turn on/off tanker.
- 4.# Use 40amp relay to power Tanker. Relay should be directly connected to battery (plus side)
- 5.# Use 10 gauge wire to connect to battery then to relay then to Tanker
- 6.# Tanker should also have 20 amp inline fuse
- 7.# Run air hose from tanker, underneath vehicle and then to engine air filter area. Leave about 2 feet of extra air hose in engine compartment.
- 8.# Customer's mechanic will connect air hose to engine intake.

DIAGRAM:

www.HHOtube.com

- Use 10 gauge automotive wire
- Install air hose from Tanker to engine compartment area.

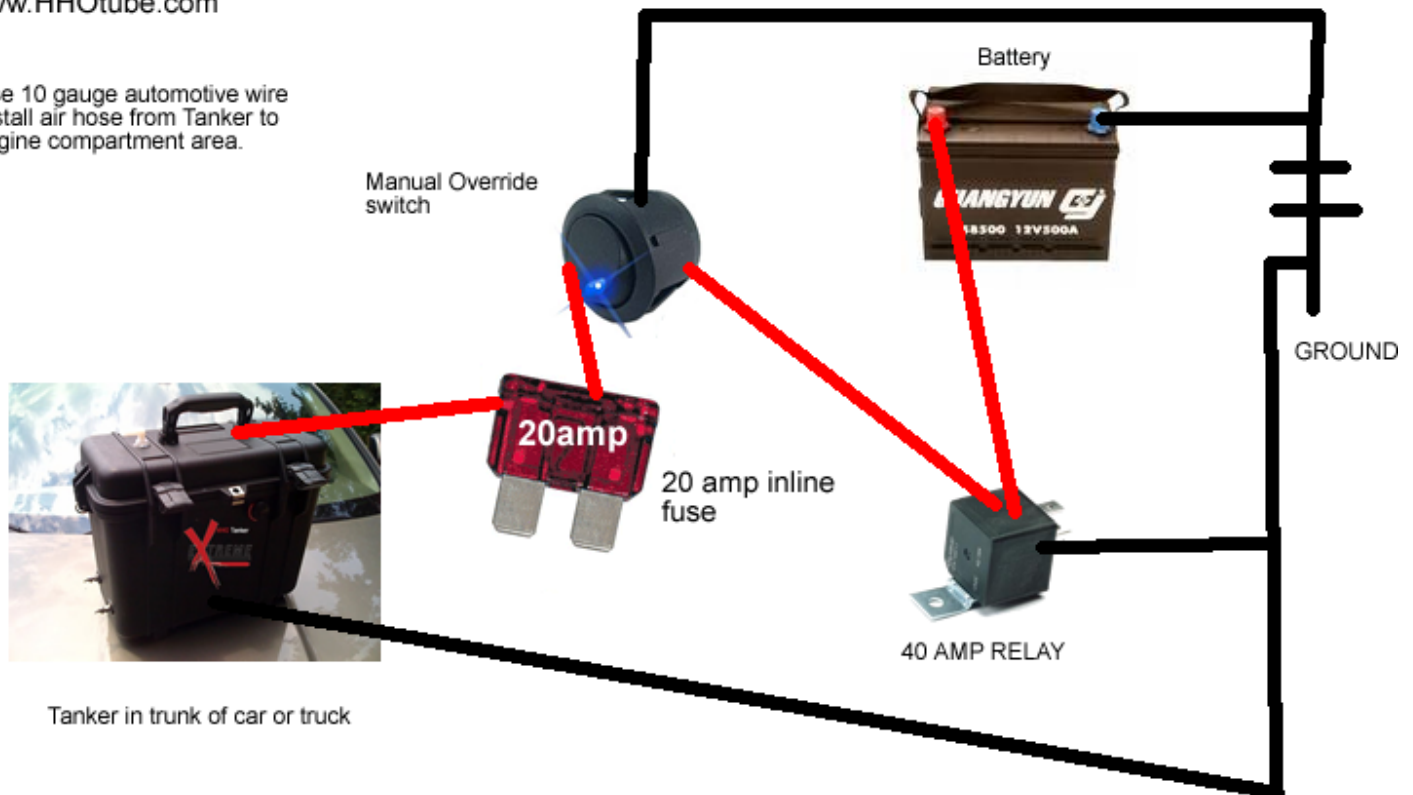

Note: CUSTOMER WILL SUPPLY AIR HOSE. Air hose can be purchased from HHOtube.com. Cut one end of air hose 3 feet long so the cut end slips on to tanker. Remaining hose can be run from tanker to engine, with uncut side going to tanker so customer can have quick disconnects to tanker.

PLEASE VISIT www.HHOtube.com for more details