

# HHOtube.com

Updated on 7/30/2008

**Thank you for purchasing our HHO Tanker EXTREME!**

## Water Level:

When filling your Tanker with water, we recommend that you add enough water so that water level is below the inside terminals and a minimum of at least 2 to 3 inches of water above the plates.

## Positive and Negative Terminals:

You will see two terminals with wing nuts on the outside of the Tanker. The negative side will be clearly marked with the letter "N" on the outside washer. The other terminal is positive.

## ***Professional Auto Mechanic Instructions/recommendations for HHO Tanker EXTREME installation***

Mechanic recommendations/installation instructions are available for download at:

[www.HHOtube.com/HHOInstall.pdf](http://www.HHOtube.com/HHOInstall.pdf)

Thank you.

Sincerely,  
HHOtube.com TEAM



Cumming, GA 30028 • Voice: 770-235-9848 \* Fax: 866-292-6905 • dt@hhotube.com

HHOTUBE.COM